



SILVERSTONE

10Gbps SuperSpeed USB-C 3.2 Gen2 to NVMe / SATA M.2 SSD external
tool-free docking station

TS16




Installation Guide

/ Installationsanleitung / Guide d'installation
Guía de instalación / Guida all'installazione / Руководство по установке
インストールガイド / 설치 가이드 / คู่มือการติดตั้ง / 安裝說明 / 安裝說明

Warranty terms & conditions

/ Garantiebedingungen
Términos y condiciones de la garantía / Termes et conditions de la garantie /
Termini e Condizioni della garanzia / Условия гарантии / 保証条件 / 보증 조건
ข้อกำหนดและเงื่อนไขการรับประกัน / 有限責任保固說明 / 有限責任保固說明

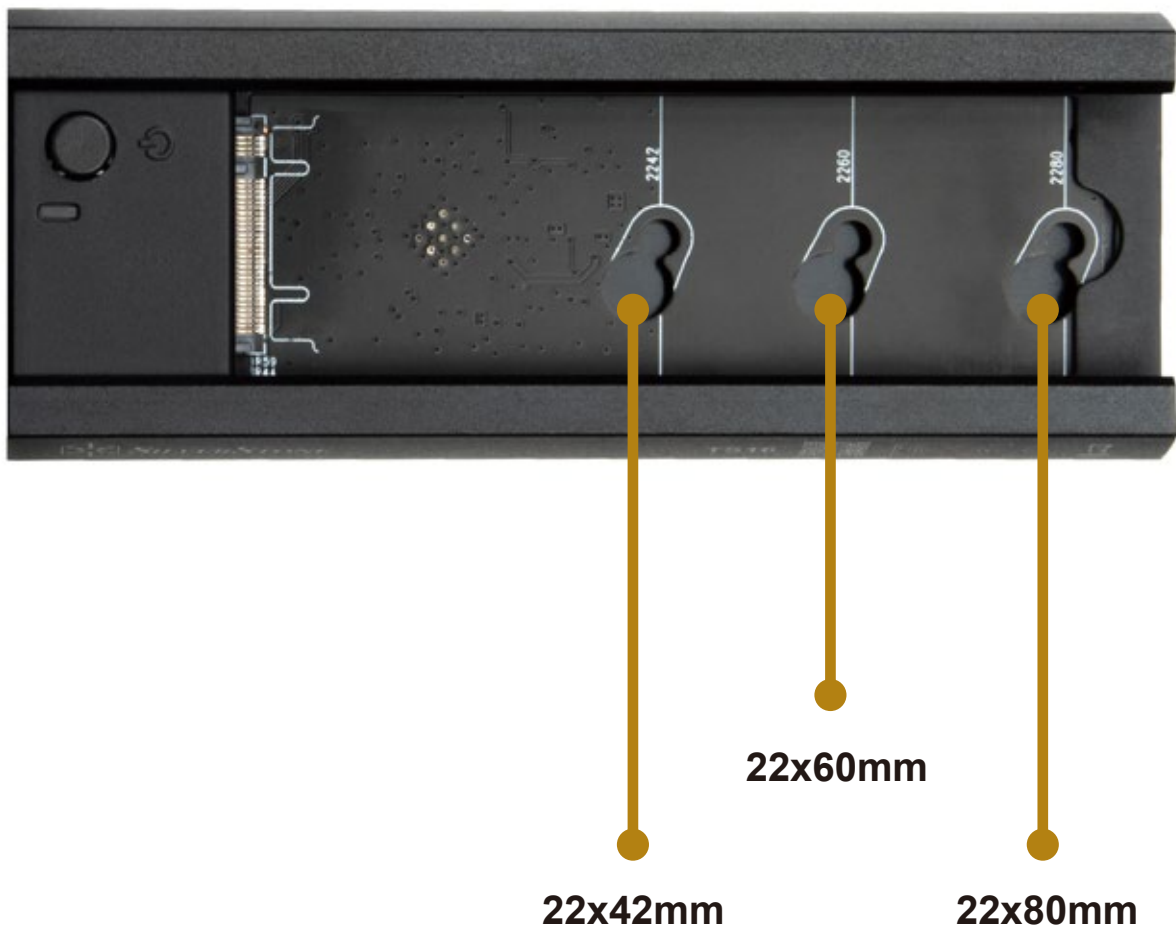

Preparation

1



②



ENGLISH

Install M.2 NVMe / SATA SSD

DEUTSCH

Installieren Sie die M.2 NVMe / SATA SSD

FRANÇAIS

Installez le SSD M.2 NVMe / SATA

ESPAÑOL

Instale SSD M.2 NVMe / SATA

ITALIANO

Installa M.2 NVMe / SATA SSD

ไทย

ติดตั้ง M.2 NVMe / SATA SSD

РУССКИЙ

Установите твердотельный накопитель M.2 NVMe / SATA.

繁體中文

安裝M.2 NVMe / SATA SSD

簡體中文

安裝M.2 NVMe / SATA SSD

日本語

M.2 NVMe / SATA SSDをインストールします

한국어

M.2 NVMe / SATA SSD 설치

Preparation

2



ENGLISH

Connect the cable

РУССКИЙ

Подключите кабель.

DEUTSCH

Schließen Sie das Kabel an

繁體中文

連接線材

FRANÇAIS

Connectez le câble

簡體中文

连接线材

ESPAÑOL

Conecte el cable

日本語

ケーブルを接続します

ITALIANO

Collegate il cavo

한국어

케이블 연결




ไทย

เชื่อมต่อสายเคเบิ้ล

Preparation




3



-  On: Solid white
-  Off: Solid red
-  Data access: Blinking white

ENGLISH




Press the switch to start the connection

-  On: Solid white
-  Off: Solid red
-  Data access: Blinking white

※ Please make sure to replace the SSD in offline mode (red light), then press the switch to start the connection.

DEUTSCH




Drücken Sie den Schalter, um die Verbindung herzustellen

-  Ein: Leuchtet Weiß
-  Aus: Leuchtet rot
-  Datenzugriff: Blinkt Weiß

※ Stellen Sie sicher, dass die SSD im Offline-Modus (rotes Licht) ausgetauscht wird, und drücken Sie dann den Schalter, um die Verbindung herzustellen.

FRANÇAIS




Appuyez sur le commutateur pour démarrer la connexion

-  Allumé: Blanc fixe
-  Éteint: Rouge fixe
-  Accès aux données: Blanc clignotant

※ Veuillez vous assurer de remplacer le SSD en mode hors ligne (lumière rouge), puis appuyez sur l'interrupteur pour démarrer la connexion.

ESPAÑOL




Pulsa el interruptor para iniciar la conexión.

-  Encendido: Blanco fijo
-  Apagado: Rojo fijo
-  Acceso a datos: Blanco parpadeante

※ Asegúrese de reemplazar el SSD en modo fuera de línea (luz roja), luego presione el interruptor para iniciar la conexión.

ITALIANO

Premere l'interruttore per avviare la connessione




-  On: Bianco fisso
-  Off: Rosso fisso
-  Accesso ai dati: Bianco lampeggiante

※ Assicuratevi di sostituire l'SSD in modalità offline (luce rossa), quindi premi l'interruttore per avviare la connessione.

ไทย




กดสวิตช์เพื่อเริ่มการเชื่อมต่อ

※ โปรดตรวจสอบให้แน่ใจว่าได้เปลี่ยน SSD ในโหมดออฟไลน์ (ไฟสีแดง) จากนั้นกดสวิตช์เพื่อเริ่มการเชื่อมต่อ

-  เปิด: สีขาวหยุดนิ่ง
-  ปิด: สีแดงหยุดนิ่ง
-  เข้าถึงข้อมูล: สีขาวกะพริบ

РУССКИЙ




Нажмите переключатель, чтобы начать подключение.

-  Включен: Постоянный белый
-  Выключен: Постоянный красный
-  Доступ к данным: Мигающий белый

※ Не забудьте заменить SSD в автономном режиме (красный свет), затем нажмите переключатель, чтобы начать соединение.

繁體中文




按下開關開始連線

-  On: 白燈恆亮
-  Off: 紅燈恆亮
-  資料存取: 白燈閃爍

※請於離線狀態(紅燈)下更換SSD, 更換完成後按下開關連線

簡體中文




按下开关开始连线

-  On: 白灯恒亮
-  Off: 红灯恒亮
-  资料存取: 白灯闪烁

※请于离线状态(红灯)下更换SSD, 更换完成后按下开关连线

日本語




スイッチを押して接続を開始します

-  オン: 白で点灯
-  オフ: 赤で点灯
-  データアクセス: 白で点滅


※必ずオフラインモード(赤信号)でSSDを交換し、スイッチを押して接続を開始してください。

한국어

스위치를 눌러 연결을 시작합니다.

-  On: 흰색으로 켜있음
-  Off: 빨간색으로 켜있음
-  데이터 접속: 흰색으로 반짝임

※ 오프라인 모드 (빨간색 불)에서 SSD를 교체 한 후 스위치를 눌러 연결을 시작하세요.

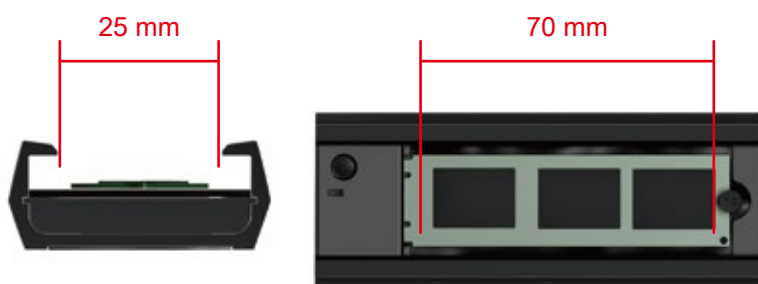

ENGLISH

※ Please install a M.2 SSD heatsink to improve heat dissipation performance if necessary. (Heatsink not included)

DEUTSCH

※ Bitte installieren Sie einen M.2-SSD-Kühlkörper zur Verbesserung der Wärmeableitung, falls erforderlich. (Kühlkörper nicht im Lieferumfang enthalten)

FRANÇAIS

※ Installez si nécessaire un dissipateur thermique pour le SSD M.2 pour améliorer les performances de dissipation de la chaleur. (Dissipateur thermique non inclus)

ESPAÑOL

※ Por favor, instale un disipador SSD M.2 para mejorar la capacidad de disipación del calor si es necesario. (Disipador no incluido)

ITALIANO

※ Installare un dissipatore di calore SSD M.2 per migliorare le prestazioni di dissipazione del calore, se necessario. (Dissipatore di calore non incluso)

ไทย

※ หากจำเป็น โปรดติดตั้งฮีตซิงค์ M.2 SSD เพื่อปรับปรุงประสิทธิภาพการกระจาย ความร้อน (ฮีตซิงค์ไม่ได้ให้มา)

РУССКИЙ

※ Пожалуйста, при необходимости установите радиатор SSD M.2 для улучшения теплоотвода. (Радиатор в комплект не входит)

繁體中文

※請依散熱需求加裝M.2 SSD散熱片(散熱片需另購)

簡體中文

※请依散热需求加装M.2 SSD散热片(散热片需另购)

日本語

※ 必要に応じてM.2 SSDヒートシンクをインストールして放熱効果を高められます。(ヒートシンクは非付属品)

한국어

※ 필요하시다면, 방열을 개선하기 위해 M.2 SSD 방열판을 장착하여 주십시오. (방열판은 포함되지 않습니다.)

Warranty terms & conditions

Warranty Information

This product has a limited 1 year warranty in North America and Australia.
For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

本产品自购买之日起，于中国地区（不包含澳门，香港特别行政区）享有一年有限责任保固（部分产品为二年，三年或五年）。
详细保固年限请参照官方网站 <https://silverstonetek.com.cn/> 公布之产品型号为依据。

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty.
Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
 - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
 - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
 - Warranty mark/stickers are not removed or broken.Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.
Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website.
Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.

<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238
(standard international call charges apply)

For Europe (support.eu@silverstonetek.de)

For China (support@silverstonetek.com.cn)

For all other regions (support@silverstonetek.com)

有毒有害物质/元素及其化学含量表

部件名称 (周边产品)	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
铝合金本体	○	○	○	○	○	○
PCBA	○	○	○	○	○	○
塑胶框	○	○	○	○	○	○
橡胶扣	○	○	○	○	○	○
线材	○	○	○	○	○	○
包材	○	○	○	○	○	○

辅助材:是指使用在产品上的涂料, 润滑脂、焊接材料、接着剂等, 以及和产品包装, 作为施工材料使用的粘接胶带、密封材料、接着剂等

本表格依据 SJ/T 11364 的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

—: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。且该限用物质为排除项目

产品合格证

检验员: 检01

生产日期: 见产品条码