

## Warranty Information

This product has a limited 1 year warranty in North America and Australia. For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor. 本产品自购买之日起, 于中国地区 (不包含澳门, 香港特别行政区) 享有一年有限质保 (部分产品为二年, 三年或五年)。详细质保年限请参考官方网站 [www.silverstonetek.com.cn](http://www.silverstonetek.com.cn) 公布之产品型号为依据。

### Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
  - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
  - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
  - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
  - Warranty mark/stickers are not removed or broken. Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>. Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

## Additional info & contacts

**For North America** ([usasupport@silverstonetek.com](mailto:usasupport@silverstonetek.com))  
SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions. <http://silverstonetek.com/contactus.php>

**For Australia only** ([support@silverstonetek.com](mailto:support@silverstonetek.com))  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238 (standard international call charges apply)

**For Europe** ([support.eu@silverstonetek.de](mailto:support.eu@silverstonetek.de))  
**For China** ([support@silverstonetek.com.cn](mailto:support@silverstonetek.com.cn))  
**For all other regions** ([support@silverstonetek.com](mailto:support@silverstonetek.com))

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

| 有毒有害物质/元素及其化学含量表 |        |        |        |              |            |              |
|------------------|--------|--------|--------|--------------|------------|--------------|
| 部件名称             | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| SDP11 CAGE       | ○      | ○      | ○      | ○            | ○          | ○            |
| 螺丝               | ○      | ○      | ○      | ○            | ○          | ○            |
| PCBA             | ○      | ○      | ○      | ○            | ○          | ○            |
| 包材               | ○      | ○      | ○      | ○            | ○          | ○            |

本表格依据SJ/T 11364的规定编制

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。  
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

产品合格证

检验员: 检01  
生产日期: 见产品条码



NO.G11234820




**SILVERSTONE**<sup>®</sup>  
Designing Inspiration

## 3.5" device bay to four M.2 SATA adapter

# SDP11

- Provides mounting for four M.2 (NGFF) SATA-based SSDs into one 3.5" drive bay
- Compatible with desktop computers & servers
- Supports multiple drive lengths of 22x42mm, 22x60mm, 22x80mm, 22x110mm
- Supports four M.2 SSD simultaneously
- Improve system performance by replacing your platter drive with up to four M.2 SSDs
- Repurpose your M.2 SSDs by installing them into your desktop computer or server
- Pre-drilled mounting holes facilitate installation and removal of SSD
- No driver installation required

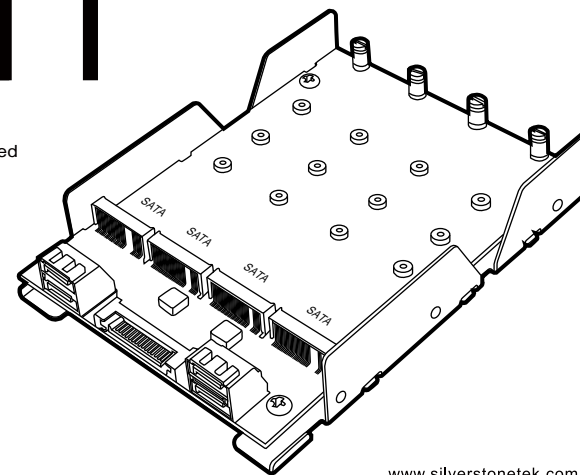

[www.silverstonetek.com](http://www.silverstonetek.com)

## Specification

|                      |   |
|----------------------|---|
| Model No.            | SST-SDP11                                 |
| Color                | Silver                                    |
| Material             | 1.0mm painted steel                       |
| Application          | 3.5" internal drive bay                   |
| Capacity             | Supports up to four M.2 SATA SSD          |
| SSD form factor      | M.2 (NGFF)                                |
| Module Key           | SATA-based B key*                         |
| Power connector      | SATA 15-Pin x 1                           |
| Host interface       | 7-Pin SATA connector x 4                  |
| Transfer rate        | Up to 6 Gbit/s (dependent on drive speed) |
| LED indicator        | HDD Access: Blue blinking**               |
| SATA cable length    | 500mm±10mm                                |
| Number of SATA cable | 4   |
| Net weight           | 236.80g±10g                               |
| Dimension            | 101.6mm (W) x 25.4mm (H) x 146mm (D)      |

\*B key SSD requires SATA 7 pin cable connected to motherboard to function. SDP11 doesn't support M.2 NVMe SSD.

\*\*Due to the different M.2 SSD designs, if you don't see LED indicator blinking, it means the SSD used does not support such feature.

## Packaging

SDP11 cage with PCB X1 632X6 screw X4  
SATA cable X4 Manual X1

## 1 Remove screws on the SDP11 PCB

### DEUTSCH

Entfernen Sie die Schrauben an der SDP11 PCB

### РУССКИЙ

Выкрутить винты на печатной плате SDP11

### FRANÇAIS

Retirez les vis sur la carte SDP11

### 繁體中文

從SDP11 PCB上移除螺絲

### ESPAÑOL

Retire los tornillos en la PCB SDP11

### 簡體中文

从SDP11 PCB上移除螺丝

### ITALIANO

Rimuovere le viti sul PCB SDP11

### 日本語


SDP11 PCBのネジを外す

### ไทย

ถอดสกรูบนแผ่น SDP11 ออก

### 한국어

SDP11 PCB의 나사를 제거하십시오

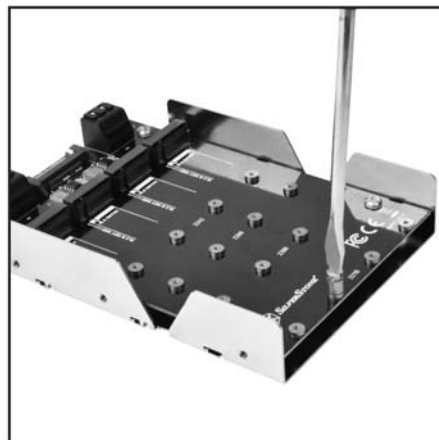

## 2 Install M.2 SATA SSD and secure screws to suitable mounting hole of M.2 SATA SSD used

### DEUTSCH

Installieren Sie M.2 SATA SSD und sichern Sie die Schrauben an der passenden Befestigungsbohrung der verwendeten M.2 SATA SSD

### РУССКИЙ

Установите M.2 SATA SSD и закрепите винты в подходящее монтажное отверстие M.2 SATA SSD

### FRANÇAIS

Installez le SSD SATA M.2 et fixez les vis au trou de montage approprié du SSD M.2 SATA utilisé

### 繁體中文

安裝M.2 SATA 硬碟並且拴緊螺絲到合適的M.2 SATA螺絲孔中

### ESPAÑOL

Instalar M.2 SATA SSD y tornillos de seguridad en el orificio de montaje adecuado de M.2 SATA SSD utilizado

### 簡體中文

安裝M.2 SATA 硬盤並且拴緊螺絲到合適的M.2 SATA螺絲孔中

### ITALIANO

Installare M.2 SATA SSD e fissare le viti all'apposito foro di montaggio dell'SSD SATA M.2 utilizzato

### 日本語


M.2 SATA SSDを取り付け、使用されるM.2 SATA SSDの適切な取り付け穴にネジを固定します

### ไทย

ติดตั้ง M.2 SATA SSD และสลักเกลียวที่ปลอดภัยเข้ากับรูยึดที่เหมาะสมของ M.2 SATA SSD ที่ใช้

### 한국어

M.2 SATA SSD를 설치하고 사용 된 M.2 SATA SSD의 적합한 장착 구멍에 나사를 고정하십시오

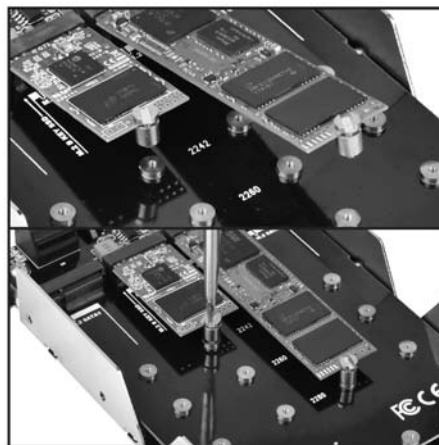

## 3 Slide in the SDP11 into your chassis and secure the screw to fixed on your chassis

### DEUTSCH

Schieben Sie den SDP11 in Ihr Gehäuse und befestigen Sie die Schraube an Ihrem Gehäuse

### РУССКИЙ

Вставьте SDP11 в ваш корпус и закрепите его винтом

### FRANÇAIS

Faites coulisser le SDP11 dans votre châssis et serrez la vis pour effectuer la fixation sur votre châssis

### 繁體中文

將SDP11安插入您的主機殼中，並確保螺絲固定您的主機殼

### ESPAÑOL

Deslice el SDP11 en su chasis y apriete el tornillo en su chasis

### 簡體中文

將SDP11安插入您的機箱中，並確保螺絲固定您的機箱

### ITALIANO

Far scorrere l'SDP11 nello chassis e serrare la vite per fissare lo chassis

### 日本語


SDP11をケースに差し、ネジでケースに固定します

### ไทย

เลื่อน SDP11 เข้าไปในตัวเครื่อง และยึดสกรูให้แน่นเพื่อยึดติดกับตัวเครื่องของคุณ

### 한국어

케이스에 SDP11를 밀어 넣고, 나사를 조여 케이스에 고정합니다

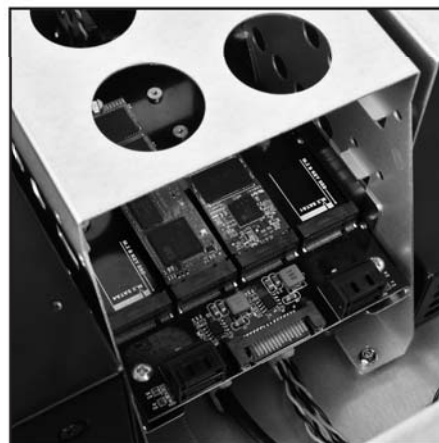

## 5 Connect to 15pin SATA power connector

### DEUTSCH

Mit einem 15-poligen SATA-Stromanschluss verbinden

### РУССКИЙ

Подключите 15-контактный разъем питания SATA

### FRANÇAIS

Connexion au connecteur d'alimentation SATA à 15 broches

### 繁體中文

將15pin SATA電源線接上

### ESPAÑOL

Enchufe el conector de potencia SATA de 15 pines

### 簡體中文

將15pin SATA電源線接上

### ITALIANO

Collegare al connettore di alimentazione SATA a 15 pin

### 日本語


15ピンSATA電源コネクタに接続します

### ไทย

เชื่อมต่อกับหัวต่อสายไฟ SATA 15 พิน

### 한국어

15핀 SATA 전원 커넥터에 연결합니다

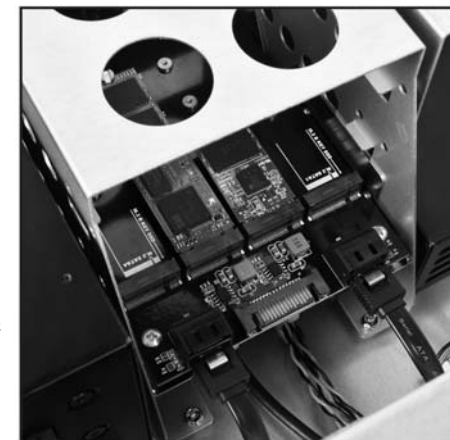

## 6 Installation finished

### DEUTSCH

Damit ist die Installation abgeschlossen

### РУССКИЙ

Установка закончена

### FRANÇAIS

Installation terminée

### 繁體中文

安裝完成

### ESPAÑOL

Instalación terminada

### 簡體中文

安裝完成

### ITALIANO

Installazione terminata

### 日本語

これでインストール完了です

### ไทย

การติดตั้งเสร็จสมบูรณ์

### 한국어

설치를 완료합니다